

Buttons.



Menu.



Timer.



Up/ Down.



Power Button, illuminated when system is ON



Cool Mode.



Heat Mode.



Automatic Mode.



Fan Only Mode.



Dry Mode.

1. Press "POWER" button - illuminated when system is ON.
2. Press "MENU" button to move through the different options, the active menu line is displayed.



2

1

3. Use the UP/DOWN arrows to select mode (Cool or Heat) and raise or lower the Temperature.



3